

CA Unified Communications Monitor

Addressing Echo in VoIP Systems

Understanding and Monitoring Echo Cancellation for Optimal
VoIP Performance



This Documentation, which includes embedded help systems and electronically distributed materials, (hereinafter referred to as the "Documentation") is for your informational purposes only and is subject to change or withdrawal by CA at any time.

This Documentation may not be copied, transferred, reproduced, disclosed, modified or duplicated, in whole or in part, without the prior written consent of CA. This Documentation is confidential and proprietary information of CA and may not be disclosed by you or used for any purpose other than as may be permitted in (i) a separate agreement between you and CA governing your use of the CA software to which the Documentation relates; or (ii) a separate confidentiality agreement between you and CA.

Notwithstanding the foregoing, if you are a licensed user of the software product(s) addressed in the Documentation, you may print or otherwise make available a reasonable number of copies of the Documentation for internal use by you and your employees in connection with that software, provided that all CA copyright notices and legends are affixed to each reproduced copy.

The right to print or otherwise make available copies of the Documentation is limited to the period during which the applicable license for such software remains in full force and effect. Should the license terminate for any reason, it is your responsibility to certify in writing to CA that all copies and partial copies of the Documentation have been returned to CA or destroyed.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CA PROVIDES THIS DOCUMENTATION "AS IS" WITHOUT WARRANTY OF ANY KIND, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT WILL CA BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY LOSS OR DAMAGE, DIRECT OR INDIRECT, FROM THE USE OF THIS DOCUMENTATION, INCLUDING WITHOUT LIMITATION, LOST PROFITS, LOST INVESTMENT, BUSINESS INTERRUPTION, GOODWILL, OR LOST DATA, EVEN IF CA IS EXPRESSLY ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE.

The use of any software product referenced in the Documentation is governed by the applicable license agreement and such license agreement is not modified in any way by the terms of this notice.

The manufacturer of this Documentation is CA.

Provided with "Restricted Rights." Use, duplication or disclosure by the United States Government is subject to the restrictions set forth in FAR Sections 12.212, 52.227-14, and 52.227-19(c)(1) - (2) and DFARS Section 252.227-7014(b)(3), as applicable, or their successors.

Copyright © 2012 CA. All rights reserved. All trademarks, trade names, service marks, and logos referenced herein belong to their respective companies.

Contact CA Technologies

Contact CA Support

For your convenience, CA Technologies provides one site where you can access the information that you need for your Home Office, Small Business, and Enterprise CA Technologies products. At <http://ca.com/support>, you can access the following resources:

- Online and telephone contact information for technical assistance and customer services
- Information about user communities and forums
- Product and documentation downloads
- CA Support policies and guidelines
- Other helpful resources appropriate for your product

Providing Feedback About Product Documentation

If you have comments or questions about CA Technologies product documentation, you can send a message to techpubs@ca.com.

To provide feedback about CA Technologies product documentation, complete our short customer survey which is available on the CA Support website at <http://ca.com/docs>.

Contents

- Chapter 1: Overview** **7**
- What is Echo?7
- Echo is Never Digital.....8
- What Causes Echo?8

- Chapter 2: Echo Metrics and Cancellation** **11**
- Echo Volume11
- Echo Delay.....12
- ECAN Limitations.....12

- Chapter 3: ECAN Metrics** **13**
- Echo Loss13
- Signal In and Signal Out.....14

- Chapter 4: Addressing Echo Problems** **15**

- Chapter 5: Summary** **17**

Chapter 1: Overview

Echo is a troubling problem for telecom professionals. Most of us have suffered through a telephone call where we had to try to talk with a lot of echo on the wire. It is very distracting. Most people find it hard to concentrate when they hear their own words repeated, and try to talk over them.

Voice over IP (VoIP) does not create echo. However, due to the temporal aspect of echo, VoIP systems can and do increase the amount of echo heard during a telephone conversation. Echo cancellation is one of the more complex parameters that need tuning to preserve VoIP call quality. And IP networking specialists are increasingly finding that they must understand and monitor echo cancellation to manage their VoIP system.

This white paper gives an overview of echo issues, provides a brief introduction to echo cancellation, and describes the echo metrics provided by the CA Unified Communications Monitor (UC Monitor) management solution.

What is Echo?

Echo is your voice coming back to you, as if you were repeating yourself. During a normal two-person phone conversation, your voice is transmitted from your mouth to the ear of the person at the other end, and their voice is returned from their mouth to your ear. However, in any conversation, a certain amount of your own voice is also part of what you hear, whether you are talking face-to-face with someone who is sitting in your office, or talking to someone on the phone. This experience of hearing your own voice is not echo, but *sidetone*, and is a normal aspect of talking and listening.

Your own voice becomes echo when it comes to your ear with a significant delay from the time you spoke. Sidetone is scarcely noticeable when the delay between your speaking and hearing is less than 25 milliseconds. Within that time window, the human brain does not perceive the sound as echo.

Echo, then, is very much a function of delay. Once you can hear your own voice more than 25 ms later, the possibility of perceiving it as echo arises. Twenty-five to 150 ms is a typical delay range for international telephone calls, and this is why echo cancellation is necessary for such calls. Voice over IP calls don't actually create additional echo, but they also have a delay budget in the range of 150 ms to preserve audio quality, so VoIP systems commonly employ echo cancellation as well.

Among the various settings and parameters that need tuning to preserve optimal call quality in a VoIP system, echo cancellation is one of the more complex, least understood factors that IP networking specialists must address when they encounter VoIP for the first time. To understand echo cancellation and the metrics associated with it, we need to look at some other aspects of echo that affect the implementation of echo cancellation on voice gateways.

Echo is Never Digital

Echo is always caused by the analog components in the telephony system. The digital stream of packets traveling in one direction of a VoIP call cannot “bleed into” the digital stream of packets in the other direction, nor are the packets played back at the receiving end of the call. The same is true for the digital parts of the Public Switched Telephone Network (PSTN). Although the underlying electrical signals that carry the bits over the PSTN are, indeed, analog, the corruption of those signals results in digital noise or other problems, but not in echo.

Strictly speaking, echo is never caused by VoIP. In fact, what happens is that the longer delays introduced by all VoIP systems reveal echo that was imperceptible with the shorter delays of the PSTN. By delaying existing echo signals longer, the VoIP network causes them to fall outside that 25 ms window and become audible to us.

What Causes Echo?

Echo is the reflection or return of the speaker’s voice to the speaker. It has an analog source, and it usually occurs at the far end of a conversation. Cisco explains that the main two types of echo have different sources:

- Hybrid echo. Caused by an impedance mismatch in a hybrid circuit, such as a two-wire to four-wire interface, which allows the Tx signal to appear on the Rx path.
- Acoustic echo. Caused by poor insulation between the ear piece and the microphone in telephone handsets and hands-free devices.

At several places along a phone circuit, your voice can get into the return channel and come back to you. The first interface where echo may occur is at the transition between a 4-wire and a 2-wire interface. Analog telephone handsets are 2-wire devices. At some point in the path, perhaps in a local PBX, there is a hybrid interface that converts the network 4-wire interface to the 2-wire interface. Impedance mismatches here reflect some of the energy back into the network, creating a potential source of hybrid echo.

Another common source of echo is the basic hardware. The mouthpiece of the phone at the far end may be too close to the ear piece, or it may be poorly insulated, so that your voice is heard and forwarded on the same return channel as the one on which the person at the far end is speaking. Therefore, the analog phone itself is a possible source of acoustic echo. But even more suspect these days is the speaker phone function of the phone at the far end of the call. Speaker phones broadcast the voice and simultaneously listen to the voices of the speakers in the room. Despite advanced DSP functions, it is very easy for speaker phones (especially cheap ones) to send back some of the far end voice as part of what they are “hearing.”

Because delay is a necessary condition for echo, it is rare for components on the speaker’s side of the call to cause echo. Even if part of the transmitted signal is reflected back to the speaker by means of the return channel, the propagation delays are so brief that they are never heard as echo. And because echo is rarely caused by a local component and has an analog source, the main suspects when an echo problem crops up are usually part of the “tail circuit” connecting the far end speaker to the PSTN. See [Figure 1](#) (see page 13) for an illustration.

Chapter 2: Echo Metrics and Cancellation

If echo usually occurs at the far end of a call, echo cancellation is ideally done at the far end of the call as well. However, it can be done at any analog boundary in the network, with varying degrees of success. In one sense, you cannot eliminate an echo originating at the far end of the circuit if you do not control the equipment at the far end. However, you can minimize it using echo cancellation (ECAN) devices.

One place where telecom or network engineers try to minimize echo in a VoIP system is at the gateway that connects an IP network to the PSTN. Although the echo originates at the far end of the call, echo cancellation here can work, within limits.

An echo cancellation device compares the signal going into the tail circuit with the signal coming back out. The ECAN remembers the signal pattern of the signal entering the tail circuit and examines the data exiting the circuit to see if it contains this pattern. If I say, "Is that good?" and you reply, "Fine" the ECAN is remembering "Is that good?" and looking for it mixed in with "Fine."

Two dimensions of the ECAN's work are important: echo strength, or volume, and echo delay.

Echo Volume

Not surprisingly, the louder the echo, the more distracting it is. Echo cancellation in effect consists of attenuating the amplitude of the echo part of the signal so that the echo is not easily heard. As some point, the echo becomes so quiet that it disappears, as compared to the foreground volume of the call.

Volume is typically measured in decibels (dB). You have probably seen the charts that show that a whisper is in the range of 20 dB while a jet engine or a rock band is around 120 dB.

Echo strength, which is equivalent to volume, is measured as echo return loss (ERL). The ERL sets some boundaries on the ECAN's function because the echo must be weak enough to be distinguished from regular speech. In practice, this means that echo must be 6 dB quieter than the speech it appears alongside for the ECAN to be able to suppress it. If the echo is louder than this, it typically falls into the volume range of the actual replying speaker and cannot be safely removed without endangering the conversation contents. So, if an echo were actually present in a telephone conversation and so loud that the ECAN could not distinguish it from the conversation, you would be more or less doomed to a very bad call with high levels of echo.

Echo Delay

Delay is the other key dimension of echo cancellation. As the ECAN examines the signal returning from the tail circuit, looking for a pattern that matches the signal sent into the tail circuit, it applies a convergence time algorithm to find the echo portion. Basically, this means that ECANs obey a time window that limits their operation. They look for the signal going into the tail circuit to be repeated in the signal coming back within a specific time, like 12 ms. Typical values are from 8 to 64 ms.

ECAN Limitations

Because the ECAN is actually modeling the response of the tail circuit mathematically, it starts each conversation with no knowledge of which part of the signal is legitimate speech and which part is echo, so it has to build its model. This usually takes a few seconds. After that, the ECAN's ability to discern and remove echo reaches its operating state for that call, and most echoes fade.

If a signal included multiple reverberations at different delays, like ripples in a pond, the ECAN would see perhaps the first two, but miss the one that arrived after 12 ms had passed. Typically, the energy level of each successive reverberation is reduced, so the resulting echo would potentially be quite soft anyway.

Distortion can also exceed the ability of ECANs operation. If the echo itself is so distorted that it does not truly match the pattern seen as the signal was sent into the tail circuit, the ECAN will not be able to recognize it as echo.

Chapter 3: ECAN Metrics

Taking into consideration the fact that echo cancellation is really all about echo suppression and not echo prevention, you have probably already deduced that echo is extremely common in any telephony environment. Echo plagues VoIP systems due to their multiple sources of delay. It is therefore important to closely monitor the echo levels in a given VoIP system. Unless they use a mobile phone and expect at least slightly inferior service, users will complain stridently if echo becomes noticeable during their phone calls.

When monitoring echo levels in a phone system, or when troubleshooting a reported issue with echo, telecom professionals apply a well-known set of metrics that express the effectiveness of echo cancellation. These metrics also apply to VoIP.

Echo Loss

Echo return loss (ERL) measures the loss of volume between the original signal and the echo. An ERL of zero is the worst case, meaning that the echo is fully as loud as the original signal. As the delay grows longer, an ERL of up to 55 dB (and at least 15 dB) is necessary to soften the echo enough to avoid distraction. Applying this principle to VoIP, with long delays (up to 150 ms for acceptable call quality), the echo part of the signal needs to be up to 55 dB quieter than the original voice in order to avoid the perception of echo. So high ERL values are good. Note that ERL and related values mentioned in this document are all part of various ITU standards.

The amount of echo suppression is measured in the ERLE, or echo return loss enhancement, which expresses how much quieter the ECAN was able to make the echo, in dB. In other words, ERLE is a measure of what the actual echo canceller is able to accomplish. While ERL measures the “native” echo coming from the tail circuit or far end of the call, ERLE is the amount of additional echo attenuation the ECAN provides. Seen together, they exactly equal the ACOM value.

Another standard metric applied to echo cancellation, the ACOM value is the view of echo from the IP side of the echo canceller. As defined in ITU G.168, ACOM is the “combined” echo return loss through the system, or the attenuation of echo from all possible means.

ACOM resembles ERL. It is a measure of the degree to which an echo signal has been attenuated. The difference is that ACOM is measured on “our side” of the ECAN device. Therefore, because it includes all sources of echo loss in each direction of the circuit, ACOM is the best gauge of echo strength. Like ERL, ACOM should be high.

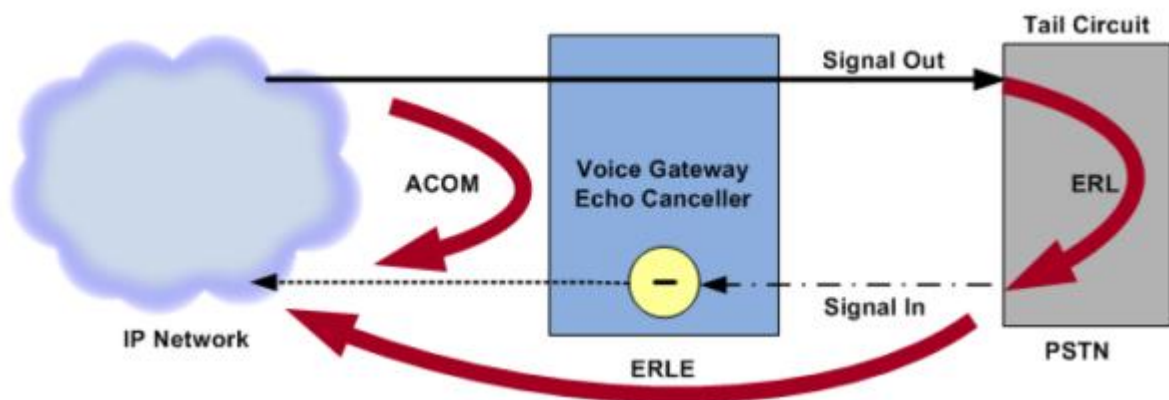


Figure 1. Echo measurements and echo cancellation.

Signal In and Signal Out

The Signal In and Signal Out metrics are useful for testing a circuit to see whether it is introducing echo. Cisco System's echo testing procedures use these metrics to measure the effects of altering the signal strengths when tuning echo levels.

Signal In is the audio signal traveling in the direction of the IP network, measured as it enters the ECAN from the tail circuit. It contains echo that needs to be canceled. Signal Out is the audio signal coming out of the ECAN and going into the tail circuit, from the IP network to the PSTN. The Signal Out stream contains an estimation of the amount of echo in the audio stream. Both metrics are measured by the gateway on the PSTN side of the gateway's ECAN.

ERL is used along with Signal In and Signal Out to tune the echo canceller. Remember that ERL must be at least 15 dB to distinguish the echo portion of the signal from the voice itself. To enhance this difference and enable cancellation, the voice gateway ports perform “input gain” and “output attenuation” on the signals. Input gain is performed at Signal In, before the gateway's ECAN sees the echo, and output attenuation is performed at Signal Out, after the gateway's ECAN has seen and cached the original signal. Thus, these metrics provide reference points for adjusting the overall strength of the signals to enable echo cancellation. They are used in echo troubleshooting to adjust the signal gain or attenuation performed by the gateway so that:

$$\text{Signal Out} - \text{Signal In} > 6 \text{ dB}$$

Chapter 4: Addressing Echo Problems

The CA Unified Communications Monitor (UC Monitor) product has several features that make it uniquely capable of measuring echo levels in voice over IP telephone calls, sending alerts when echo crosses a threshold, and helping track down the source of an echo problem.

The UC Monitor system continually monitors both call setup performance and call quality on the VoIP network. ACOM is reported for all call legs that include a voice gateway. One of the default call quality threshold settings instructs the UC Monitor collector to raise alerts if ACOM values are too low. Like ERL, ACOM should be high. A UC Monitor alert is sent by default when ACOM drops to 15 dB. As stated earlier, ECANs use a limit of 6 dB to distinguish echo and avoid suppressing the actual contents of a conversation. If the ERL value is too low, the echo signal that returns to the gateway might be too loud, falling within 6 dB of the conversation signal. As a result, the ECAN treats the echo as voice and ignores it. With the default threshold settings, UC Monitor flags call quality as excessively bad when ACOM measurements, or the sum of ERL + ERLE, fall to 6 dB. ACOM measurements are available per gateway, so you can easily spot a gateway where excessive echo is causing call quality to deteriorate.

In addition to threshold monitoring, UC Monitor also reports ERL and ACOM values in real time for “watched” calls. The UC Monitor Call Watch feature collects additional diagnostic data from selected VoIP calls. During a Call Watch, the collector actively gathers detailed quality metrics for all calls made to and from a selected IP phone by polling the phone and any associated gateway, if a call to the PSTN is watched. The collected data is presented in a series of charts, which are displayed and updated in real time, as the watched calls are in progress.

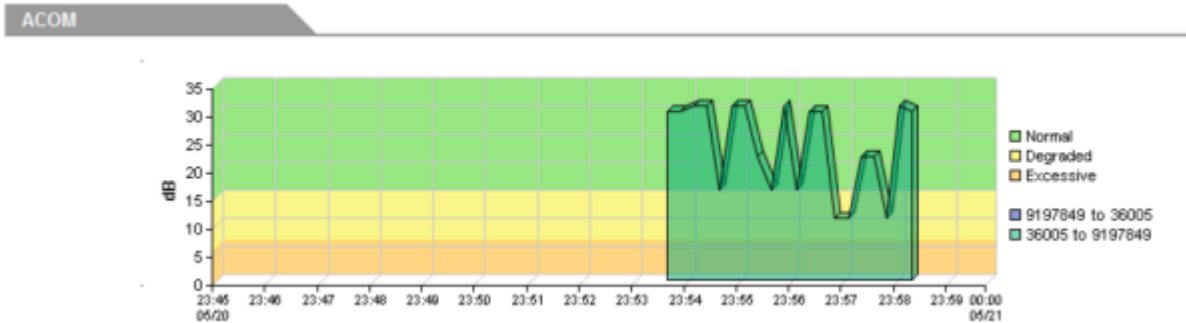


Figure 2. Real-time ACOM measurements are compared to the Degraded and Excessive performance thresholds.

The Call Watch report also includes Signal In and Signal Out metrics. In addition to contributing to the information gathering phase of troubleshooting a call-quality problem, these values can help engineers tune their echo cancelers. In order to tune the ECAN, test signals are introduced into a voice gateway circuit from an IP phone. Gain and attenuation are applied through the command line at the incoming and outgoing gateway interfaces until the desired values of ERL and ERLE are obtained.

Cisco System's typical echo testing procedures expect you to gather these metrics by frequently running a command from the command-line interface during an active phone call. Now you can simply start a UC Monitor Call Watch for a phone connected to the gateway under test, make a phone call to the PSTN to or from that phone, and take a look at the metrics as they are reported in real time. The signal levels are presented in a graph format that is continually updated during the tuning procedure.



Figure 3. Signal In and Signal Out metrics are useful for tuning an echo canceller.

Chapter 5: Summary

Echo is a difficult problem and not one that can be readily solved without access to the end-to-end circuit. Echo cancellation devices at the boundary of the VoIP system attempt to reduce echo that is of no concern in the PSTN so that it cannot be heard in the IP telephony environment. CA UC Monitor provides a quick, overall rating of the success of this effort in the form of ACOM values for all gateway calls made on the monitored network, as well as some additional details, such as ERL, Signal In, and Signal Out, that are essential for troubleshooting echo problems.

Helpful References

- CA Infrastructure Management products:
<http://www.ca.com/us/infrastructure-management.aspx>
- *Troubleshooting Echo Problems between IP Phones and IOS Gateways:*
http://www.cisco.com/en/US/tech/tk652/tk698/technologies_tech_note09186a0080149a1f.shtml
- *Using the show call active voice Command to Troubleshoot Voice Quality Issues:*
http://www.cisco.com/en/US/tech/tk652/tk698/technologies_tech_note09186a008019ab88.shtml#topic6
- *IP Telephony Advanced Troubleshooting:*
http://www.cisco.com/web/CA/events/pdfs/IP_Telephony_Advanced_Topics_And_Troubleshooting.pdf
- *G.168: Digital network echo cancellers:*
<http://www.itu.int/rec/T-REC-G.168-200408-S/en>